Installation instruction

ARAT Special mount for Navigation Systems

Part-No.: NS 1346
for Ford "C" Max
Oct 2004.....

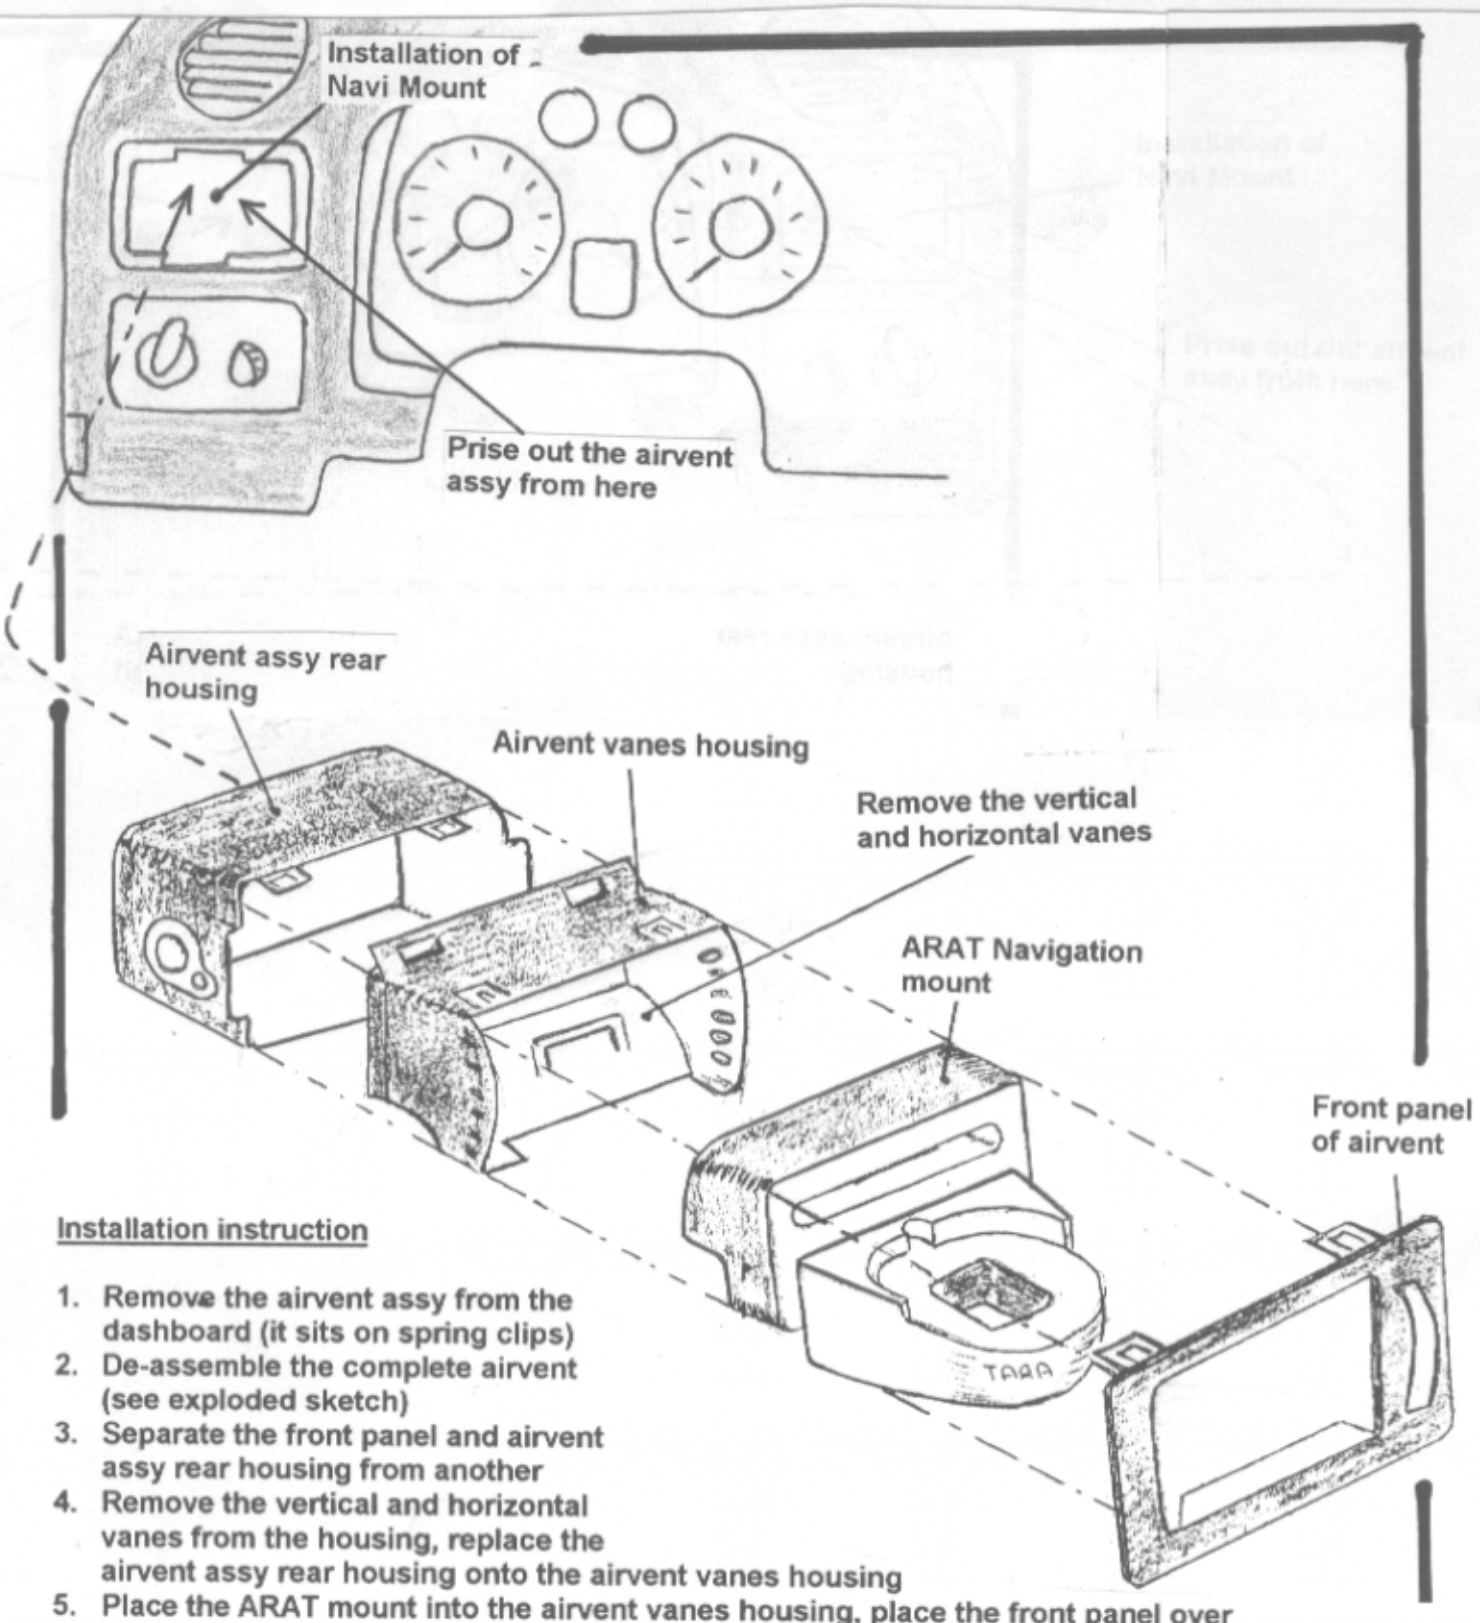
Installation of Navi Mount
Prise out the airvent assy from here
Airvent assy rear housing
Airvent vanes housing
Remove the vertical and horizontal vanes
ARAT Navigation mount
Front panel of airvent

Installation instruction

1. **Remove the airvent assy from the dashboard (it sits on spring clips)**
2. **De-assemble the complete airvent (see exploded sketch)**
3. **Separate the front panel and airvent assy rear housing from another**
4. **Remove the vertical and horizontal vanes from the housing, replace the airvent assy rear housing onto the airvent vanes housing**
5. **Place the ARAT mount into the airvent vanes housing, place the front panel over the ARAT mount, secure the mount with the supplied screws (2.9 x 16) through the airvent vanes housing into the ARAT mount side walls, replace the complete asssy back into the dashboard.**

ARAT GmbH-Hauptstrasse-33758 Stukenbrock, Germany Tel: (+49) 5207-8952-52 Fax. (+49) 5207-8952-68
E-mail. info@arat.de Website. www.arat.de